



WASH

1



- Empty your pockets and unroll sleeves
- Check garment care instructions
- Load laundry up to fill line (maximum load)
- Close door

2



Add Detergent

- Do not overfill as it will damage your clothing
- See dispenser instructions on machine

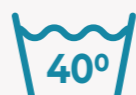
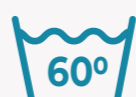
3



Select Cycle

- A & C** Standard wash **40min**
- B** Includes pre-wash **45min**

Select Temperature:

-  30° C
-  40° C (default if no selection made)
-  60° C

6



- When finished, empty the drum
- Ensure all items are removed

5



Press Start

- When you hear the beep, or see the green indicator light
- You will now have approximately 40min to chill

4



Make Payment

- Wait 15 - 20sec for payment to be processed
- Only scan QR code on your selected machine

Notice - In the event of:

A brief power failure: When power restores, press the green start button to continue the cycle

Load shedding: Avoid using the machines 45 minutes prior to the anticipated start time of load shedding



DRY

Disclaimer: If your washing has not been through a machine spin cycle, your items will not dry and you will cause damage to the dryer.

1



- Load machine-washed laundry
- Do not overfill the machine - see fill line

2



Select Temperature:

- HOT
- MEDIUM - Recommended
- LOW
- COLD

3



Make Payment

- Wait 15 -20sec for payment to be processed.
- Only scan QR code on your selected machine

4



Press Start

- When you hear the beep, or see the green indicator light
- You will now have approximately 40min to chill

5



- Ensure all your items are removed from the machine
- Clean out the lint trap after using the dryer
- Leave the door slightly open

Notice - In the event of:

A brief power failure: When power restores, press the green start button to continue the cycle

Load shedding: Avoid using the machines 45 minutes prior to the anticipated start time of load shedding